


Koroseal Wall Protection Systems

G400 Surface-Mounted Corner Guard

Installation Instructions

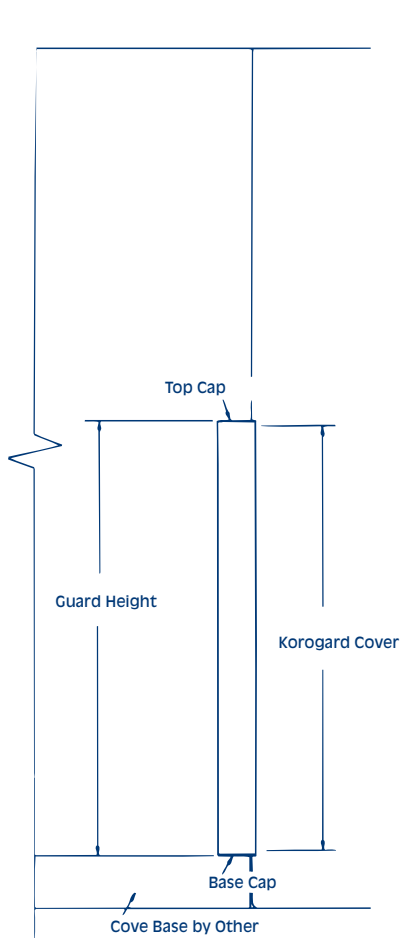

1. Insert top and bottom caps into continuous retainer. Attach to corner using appropriate fasteners directly above cove base.
2. Snap precut **KOROGARD**® cover in position. Cover should be lipped over one edge and pressure applied toward opposite leg from center with a "snap action" movement. Procedure should begin at bottom and be repeated as necessary for full height of cover.

TOP CAP





BASE CAP



KOROGARD COVER

#6 x 1-5/8" (41.3mm)
Self-Drilling
Drywall Screw

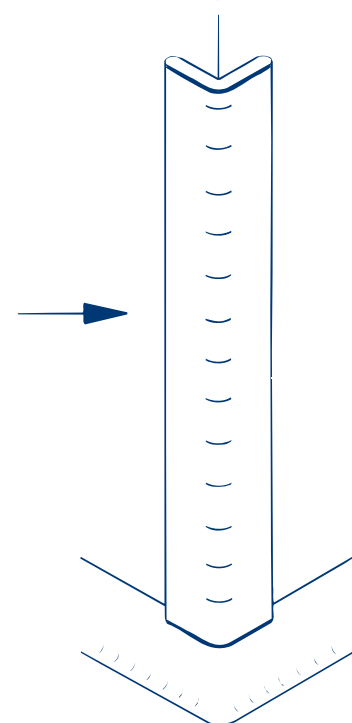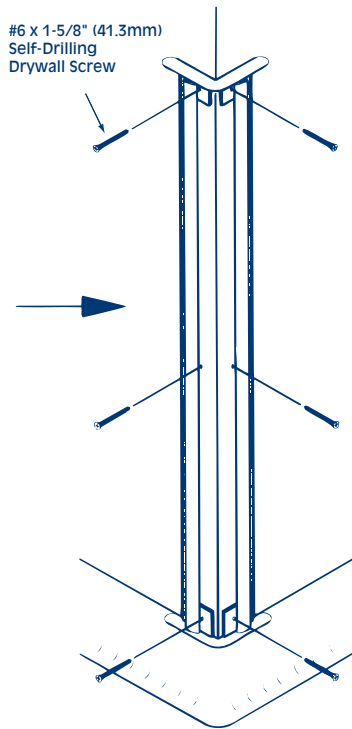

NOTE: Use nylon tappits for masonry conditions.



KOROGARD®
WALL PROTECTION SYSTEMS

800-628-0449 • www.korogard.com • Division 10 26 00