


Koroseal Wall Protection Systems

F360 Door Frame Guard

Installation Instructions

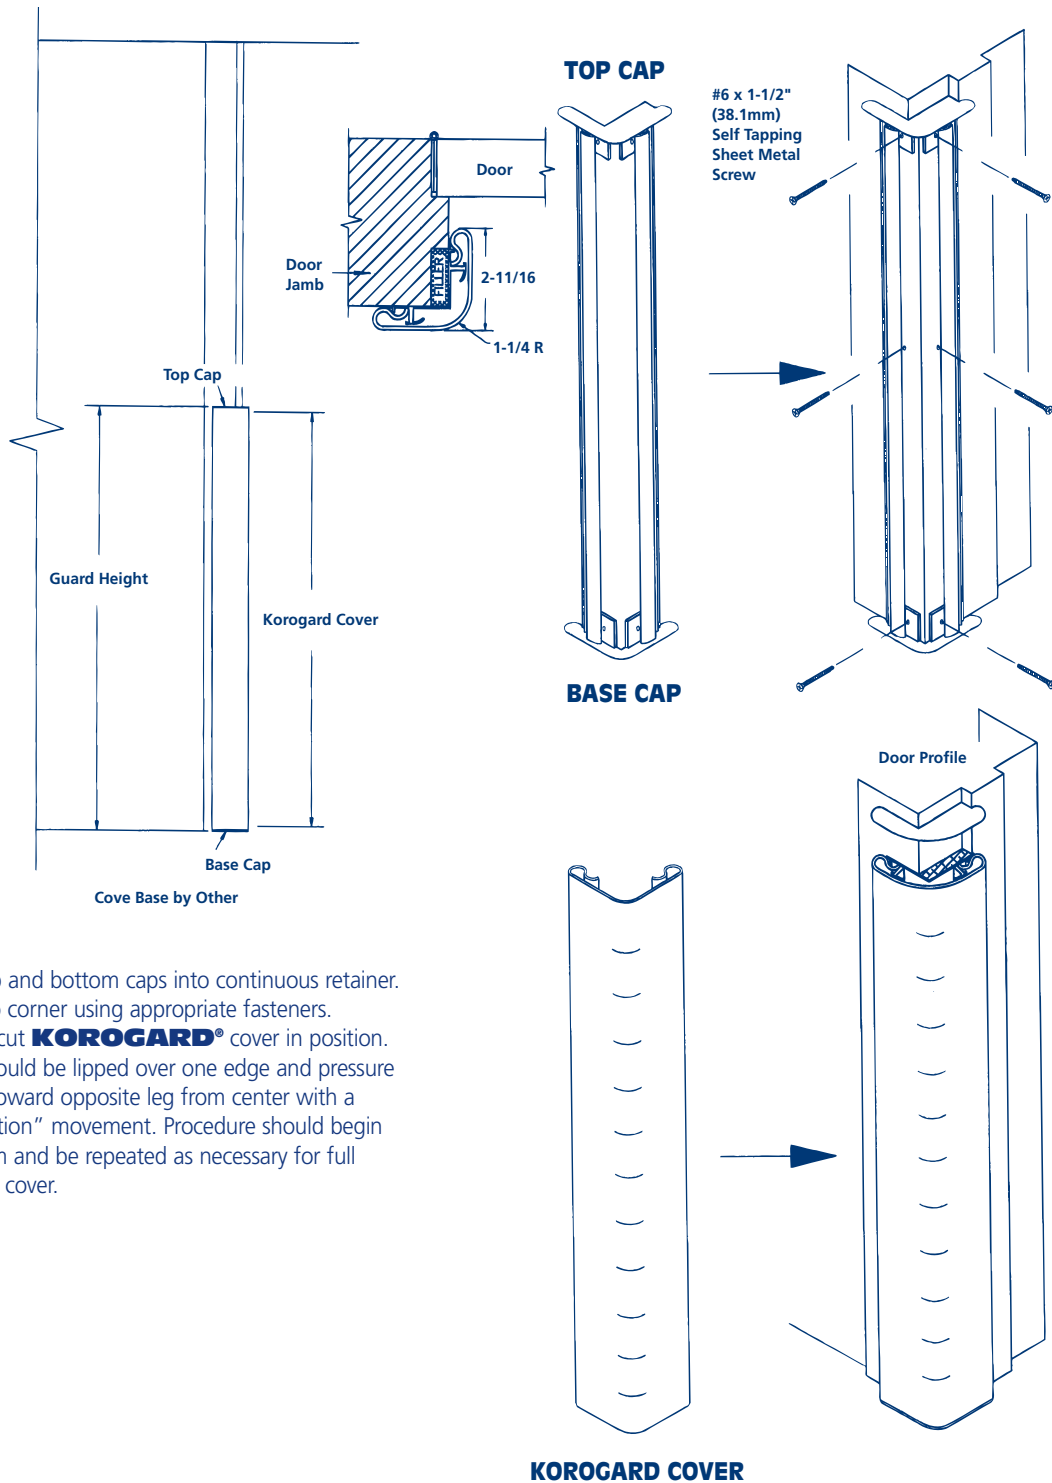

1. Insert top and bottom caps into continuous retainer. Attach to corner using appropriate fasteners.
2. Snap precut **KOROGARD**® cover in position. Cover should be lipped over one edge and pressure applied toward opposite leg from center with a "snap action" movement. Procedure should begin at bottom and be repeated as necessary for full height of cover.



800-628-0449 • www.korogard.com • Division 10 26 00